




Max Pro Evolution

Max Pro Evolution Straightener

1" Straightener with 100% titanium plates

Max Pro 100% titanium plates protect your hair's cuticle while styling and preserving your natural moisture and locking in your brilliant colour. Our floating micro-polished titanium heats quickly and evenly giving you superior styling control without tugging, crimping or burning your hair. The titanium system heats up to 230° C (450° F) in seconds, meaning that the straightener is ready to style when you are. Max Pro titanium system produces infrared heat that softens your hair, seals in the hair's cuticle and gives you a fresh salon look. The straightener utilizes negative-ion technology that neutralizes frizz and eliminates static leaving you with soft and healthy hair. Whether you wish to create straight, curly or over-the-top looks, this versatile styling tool will always leave your hair healthy, silky and static-free. Max Pro Evolution straightener comes with an automatic shut-off function after one hour, digital display and dual voltage for international usage.

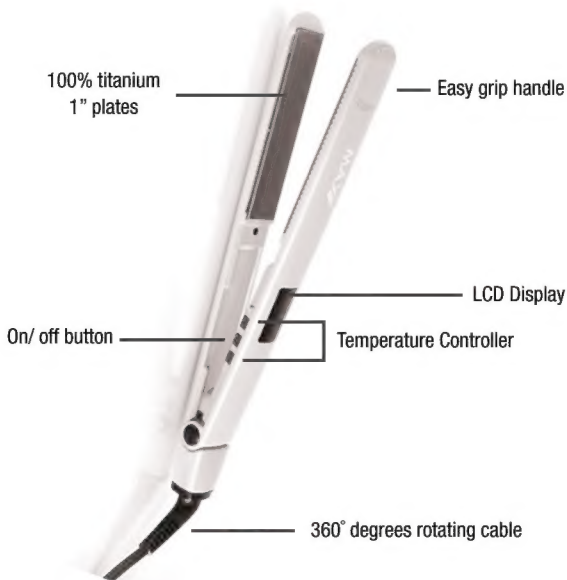

Instructions:

- Always ensure that your hair is clean and completely dry before using the hair tool.
- Ensure a water-free floor or any other surfaces near the electrical outlet or hair tool.
- This appliance may have a polarized plug with one prong wider than the other. If so, this plug will only fit into an electrical outlet if positioned in the correct way. If the plug does not fit into an outlet, ensure correct insertion of the bigger prong into the correct hole. If unable to insert the plug easily into the outlet, contact a qualified electrician; do not force the plug into an outlet.
- Plug the styling tool into an electrical outlet and slide the power switch on the inside handle to the “on” position.
- The hair tool will reach high heats instantly, but will take approximately 40 seconds to reach optimal even heat distribution.
- Once the hair tool is hot, ensure avoidance of all contacts with skin.
- When styling is complete, turn the styling tool off by sliding the switch on the inside handle to the “off” position, unplug from electrical outlet and let cool completely on heat resistant surface before storing. Never leave the styling tool plugged in or switch ‘on’ when unattended.
- Allow hair cool before touching, combing or brushing.

Safety Precautions

Read carefully before use:

Danger

- Do not use styling tool in the presence of water or while bathing, showering or washing. If the styling tool falls into water while plugged in, do not retrieve it unless main power source is shut off.
- Never use styling tools with bare or wet feet, as this could cause electrical shock or injury.

Burns

- The styling tool is extremely hot and can burn your skin. Do not touch any heated element while the styling tool is plugged in. Be sure to give the styling tool sufficient cooling time.
- If you do experience a burn, stop styling and tend to it immediately.
- Always use a thermal protection glove if offered.
- Be sure to turn the styling tool “off” after every use. Never leave a styling tool unattended when plugged in or turned “on”.
- Do not set a styling tool down near flammable surfaces or on top of delicate materials, plastic or any other materials sensitive to heat.
- If you must set the styling tool down while plugged in, do so only on a heat resistant surface. It is best to use a heat resistant Max Pro straightener/curler Mat or Holder to avoid damaging your countertops.

Defects

- Always inspect your styling tool before use and do not use if any section appears to be damaged.
- For any warranty repairs, please contact the authorized Max Pro retailer or manufacturer.
- Max Pro is not responsible for any damages caused by improper or unintended use. Original purchase receipt and detailed pictures of your styling tool are required for a warranty claim.

Storage

- When you finish using your styling tool, unplug it and give it time to cool before storing.
- Do not wrap the cord around your styling tool as this may loosen the connection or cause fraying. Handle cord gently and avoid sharp bending and twisting.
- Store in a safe, dry location for future use and out of children’s (and pets) reach.

Warranty

Thank you for purchasing a Max Pro styling tool.

This warranty is valid for two years from the date of purchase. To show our appreciation for your purchase and our dedication to our product, we are happy to upgrade you to a limited lifetime warranty free of charge! To register for the warranty, visit us at www.maxpro-intl.com and fill out a warranty registration form.

Please be sure to keep your receipt and the original packaging as a proof of purchase. This warranty is only valid for styling tools purchased from an authorized Max Pro retailer.

If your product is not working properly because of a manufacturer's defect and the warranty terms and conditions are met, your Max Pro styling tool will be repaired or replaced at the manufacturer's discretion.

This warranty does not apply to problems which are the result of misuse, damage or normal wear and tear and is void if the product is used for commercial purposes. The warranty does not apply to styling tools that have been tampered with, altered or repaired by an unauthorized Max Pro agent or the manufacturer. To request warranty service or contact a customer service representative, visit us at www.maxpro-intl.com.

We require digital images of the styling tool, as well as a copy of your original receipt. In cases involving replacements or repairs, a payment will be required to cover the shipping and handling costs (price depends on your location). Please do not hesitate to contact us at any time. We are happy to receive any questions or comments.

Thank you for your business!

Max Professional

Contact Max Professional:

Weerenweg 13F
1161AE Zwanenburg, The Netherlands



facebook.com/MaxProNL



instagram.com/MaxProNL



youtube.com/MaxProNL

E-mail address: info@max-pro.nl

www.maxpro-intl.com